INSTALLATION INSTRUCTIONS

INSTALLATION INSTRUCTIONS 0-100% MOTORIZED FRESH AIR (2MD04700324) D*CG/D*CE/D*EE/D*EG/D*HE/D*HG B*CH/B*HN 036-072

The 0-100% manual outside air system is designed to replace the unit duct cover. No drilling on the unit or field assembly is required. A 2-position control motor that opens the intake damper when the blower is energized. The amount of air is controlled by the a adjustable slide damper on damper motor.

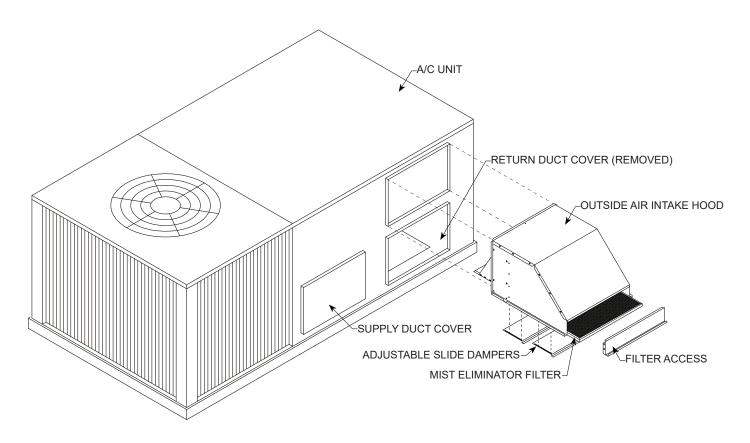


Figure 1

Step 1:

Check for correct number of parts. See list below:

1 ea. - Outside Air Intake Hood with slide dampers and filter.

Step 2:

Remove return air duct cover from unit, and save the screws.

Step 3:

Remove unit filter access panel. Route wiring through unit to plug the S5 connector to the P5 connector in the A/C unit. **Step 4:**

Install outside air assembly as shown in **Figure 1** over duct opening with the screws removed in **Step 2**.

Step 5:

Adjust the slide damper to the desired position.

NOTE: It will be necessary to remove intake hood top, so the second and third slide damper can be removed, if the full amount of outside air is required.

