

SIMPLEX BOX INSTALLATION

Step 1:

Determine Simplex Box is proper size for furnace.

Step 2:

Position Simplex Box in Pre-determined location.

* **Note Simplex Box can be used for right hand or left hand duct arrangement.**

Step 3:

Attach return duct to duct flange and seal.

Step 4:

Position 1" x ½" weather stripping (provided) around furnace opening on Simplex Box.

Step 5:



After duct opening on furnace has been cut to manufacturers recommendation place furnace on Simplex Box and position in place.

Step 6:

Remove blower door access and secure furnace in place to Simplex Box with self tapping screws (provided).

Caution: SOME FURNACES DO NOT COVER OPENING COMPLETELY ON SIMPLEX BOX. A FIELD SUPPLIED SHEET METAL BLOCK OFF PLATE MUST BE USED TO SEAL THE OPENING.

Spacers are provided for 1" or 2" filter use. If using either of these filters, insert filter channels into top and bottom filter stools by inserting tabs into slotted holes on the stools. Spacers are not required for use of 4" filters.

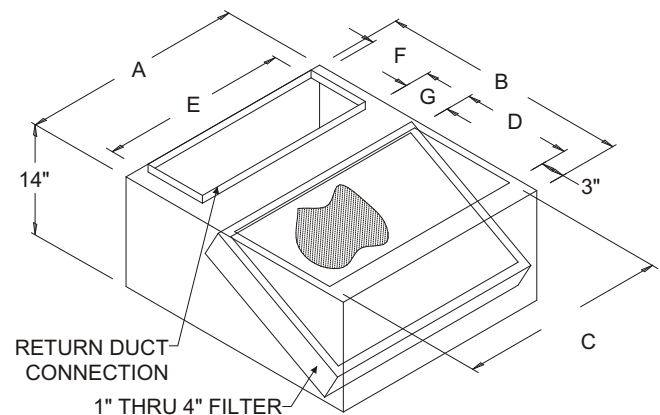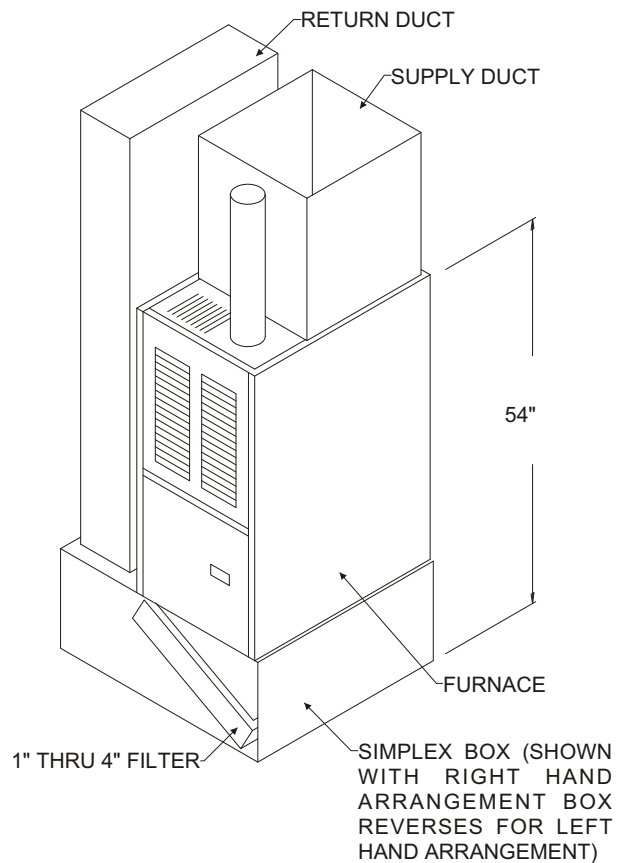

MODEL	A	B	C	D	E	F	G	FILTER SIZE	
								STANDARD SIZE PLEAT	FULL SURFACE PLEAT
01-700-40	28 ½	32	26 ½	13 ½	24	8	6	20 X 25	19 ½ X 26 ½
01-700-41		40		19		10	7	24 X 24	23 ½ X 26 ½

* NOTE: USE OF STANDARD SIZE FILTER REQUIRES A FILTER BLOCK.

ROOFTOP SYSTEMS * 1625 DIPLOMAT DRIVE * CARROLLTON, TEXAS 75006 * (972) 247-7447 * (800) 552-4822 * FAX (972) 243-0940