

INSTALLATION INSTRUCTIONS

INSTALLATION INSTRUCTIONS CURB ADAPTER RESTRAINT CLIP KIT 80-292-29

Verify all unit parts in box.


14 ea. - Seismic Restraint Clips

56 ea. - Screw #14 - 16 x 1" HWH TEK w/ Washer

56 ea. - Screw ¼ - 28 x 5" SDS5 EPY

Step 1:

Space seismic restraints clips on curb adapter as shown below prior to installing duct supports and pans.

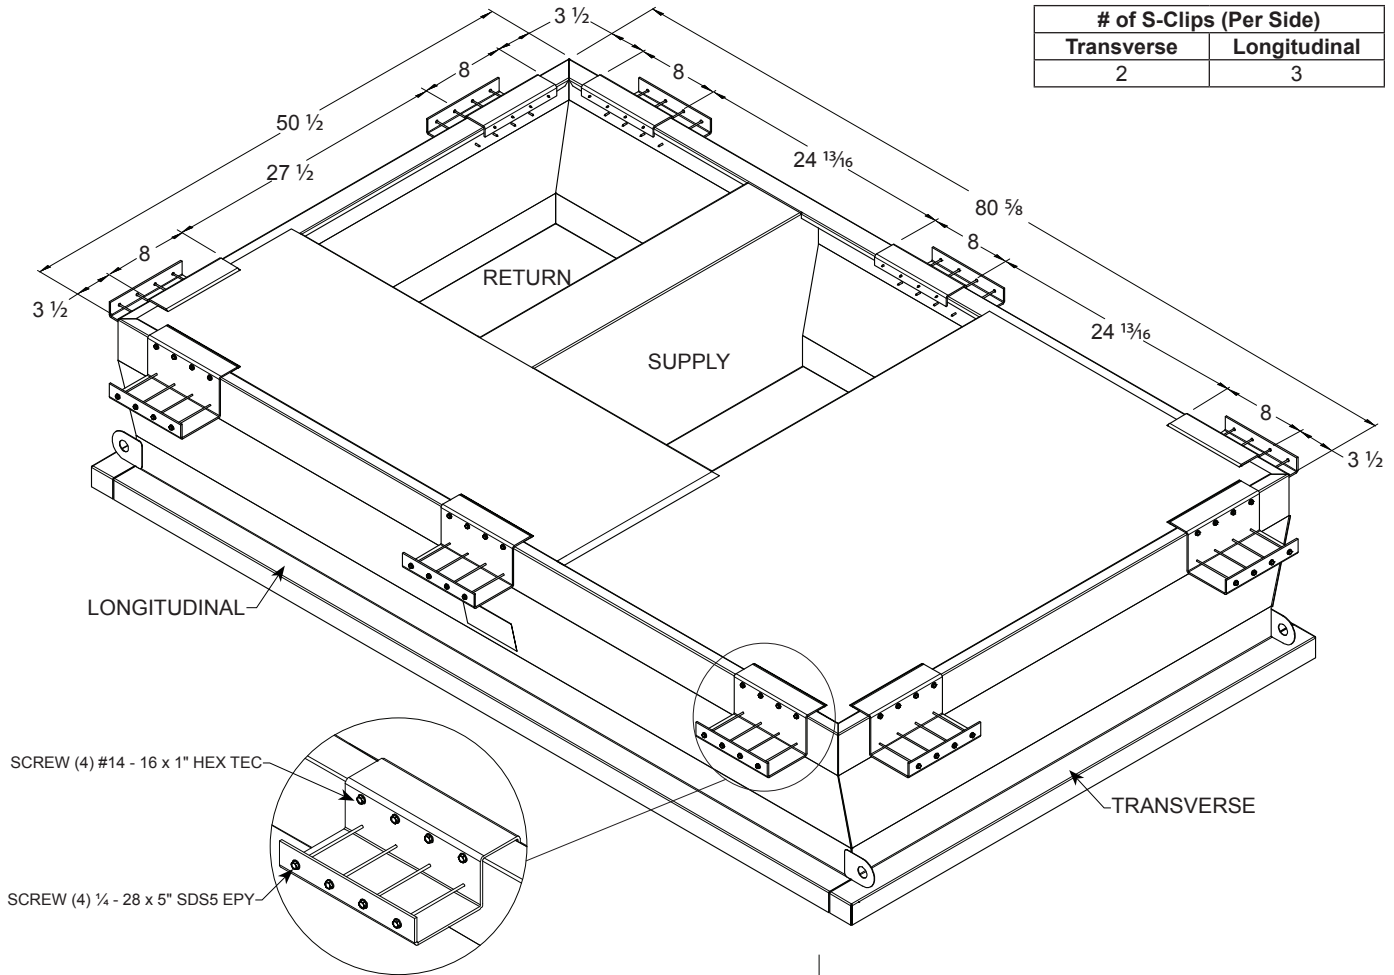

Step 2:

Screw (4) #14 - 16 x 1" HWH TEK w/ washer (screws provided) on the top front side of bracket.

Step 3:

Install duct supports and pans as shown in roof curb installations.

Step 4:

Set unit on top of curb adapter making sure bottom base rail touches clips but also resting on the top of the curb adapter (See Below).

Step 5:

Screw (4) ¼ - 28 x 5" SDS5 EPY (screws provided) through front side of bracket, base rail, and back side of bracket. See Note.

